




Installation manual

Jetprime programmable Electronic Control Unit

This document supports the current version of the Jetprime programmable ECU and all the subsequent versions until the document is replaced by a new edition.

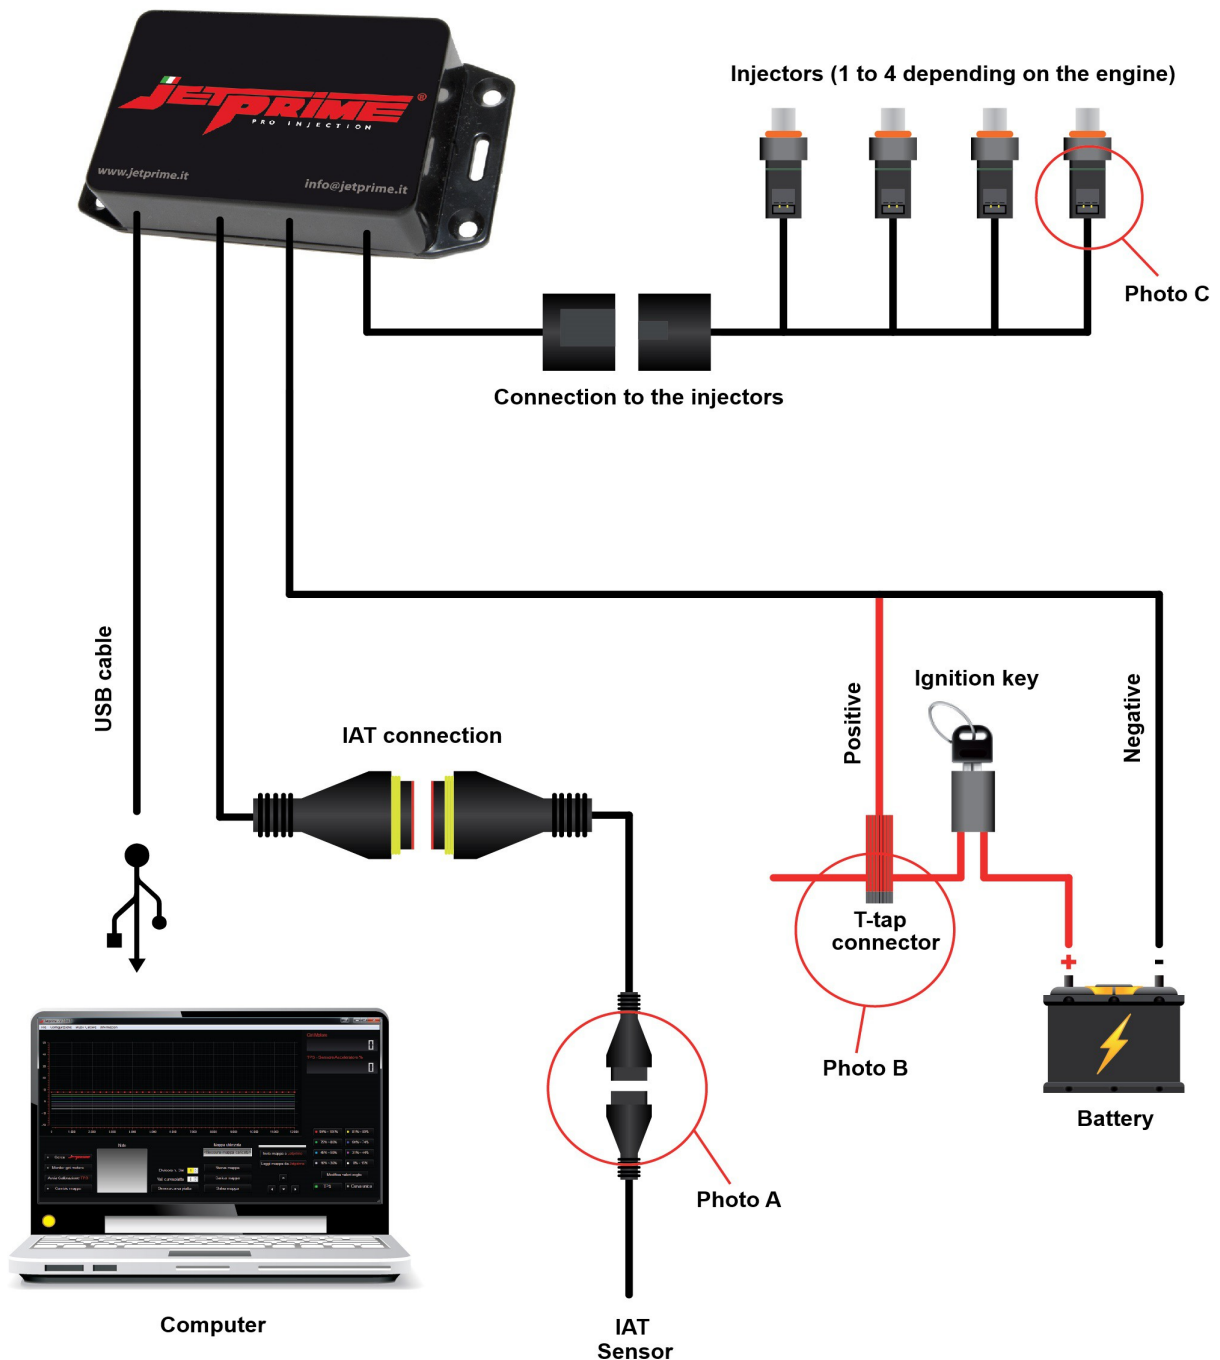

Installation instructions

1. Locate the 1st cylinder: usually it is the first on the left when looking from the front.
2. Connect the Jetprime connector with the WHITE and BROWN cables to the 1st cylinder.
3. Locate the IAT sensor and connect the 2-pole cable by making a bridge connection as shown in the diagram on page 1.
4. Using the supplied t-tap connector, connect the Jetprime to a 12V power source on the bike.

Please note:

As this is a generic guide which is not model specific, we suggest registering with our website www.jetprime.it as we are constantly updating the manuals available with more detailed instructions for each specific model. Each instruction manual can be downloaded once you have registered with our website.



This product is designed and made in Italy by:



Jetprime S.r.l. società a socio unico
Head Office: Via Eugenio Montale, 1 – 41016 Novi di Modena – Fraz. Rovereto (MO)
Tel: +39 059 672223 – Fax: +39 059 7131226
Email: info@jetprime.it - Web: www.jetprime.it

All Jetprime S.r.l. products are dedicated exclusively for sports use.

Jetprime® is a registered trademark. All rights are reserved.